


How to Pair Smart Lock and Home Automation Interface V2

- Launch the app on master mobile phone and connect to the smart lock.
- Go to settings and touch to 'USER' menu on the bottom. Touch "enroll new controller" button then press green +.
- You will hear a long and then short tone from smart lock. After short warning tone; Short-circuit negative (-) and TX1 or negative (-) and TX2.
- If the pair is successful, you will hear multiple tones from smart lock.

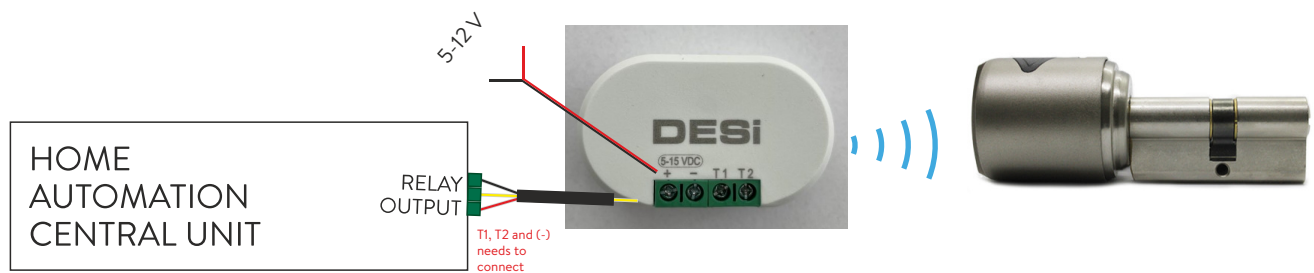

Operation Details:

- There are three different operation types in HAI V2. Normal, Toggle, Delay.

Normal: Lock-unlock operates like usual.

- Short circuit Negative (-) and TX1 : **LOCK**
- Short circuit Negative (-) and TX2 : **UNLOCK**

Toggle: Locks in one short circuit and unlocks in the other short circuit.

- Connect TX1-TX2 and leave it. Negative (-) and TX1-TX2 will send lock command then if you again short circuit Negative (-) and TX1-TX2 it will send unlock command.

Delay: There is JP1 on the top and it has two holes. Short circuit holes and leave it (you can use cable or paperclip to make short circuit). Then commands will react with 3 seconds delay.

- Short circuit Negative (-) and TX1 : **LOCK** (3-4 seconds delay)
- Short circuit Negative (-) and TX2 : **UNLOCK** (3-4 seconds delay)

TECHNICAL SPECIFICATIONS:

Power: 5 - 15 V DC

Current Consumption: Up to 30 mA

Temperature Range: 0 - 40 C

Controlling Range: Up to 15 m (Highly depended on environmental conditions)